



USER INSTRUCTIONS PUBLIC MODE

Digital Combination Locks 3780/1/2/4

For full fitting, operating and
programming instructions please visit
www.lowe-and-fletcher.co.uk

Lowe & Fletcher Ltd
Moorcroft Drive
Wednesbury, West Midlands
WS10 7DE, England

T: + 44 (0) 121 505 0400

F: + 44 (0) 121 505 0420

E: sales@lowe-and-fletcher.co.uk

W: www.lowe-and-fletcher.co.uk

Public Mode

Lock

ENTER CODE



CONFIRM CODE



TURN HANDLE
ENSURE LOCKING

To Unlock

ENTER CODE



TURN HANDLE
TO OPEN



Error



Errors will time-out after 4 seconds.

Unfinished instructions will time-out after 4 seconds.

Always wait for LED lights to finish before pressing next key.