


Assembly Elme foot single 140188



1. Insert part A into the holes in the screen.
2. Use the 4 included wood screws (3.5X25) to fasten part A to the screen.
3. Attach the bottom plate using the 2 included flatheaded screws (M10 X 20).

Assembly Elme foot double 140189

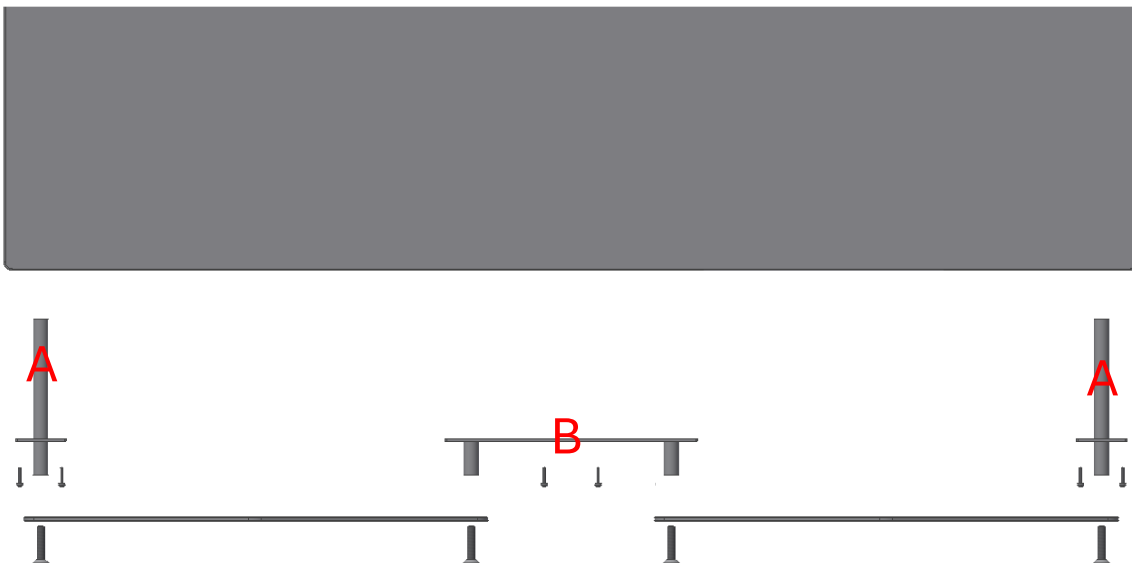

1. Insert part A into the holes in the screen.
2. Use 4 of the included wood screws (3.5X25) to fasten part A to the screen.
3. Attach the bottom plate to part A and part B using the 4 included flatheaded screws (M10 X 20).
4. Attach part B to the screen using 2 of the included wood screws (3.5X25).