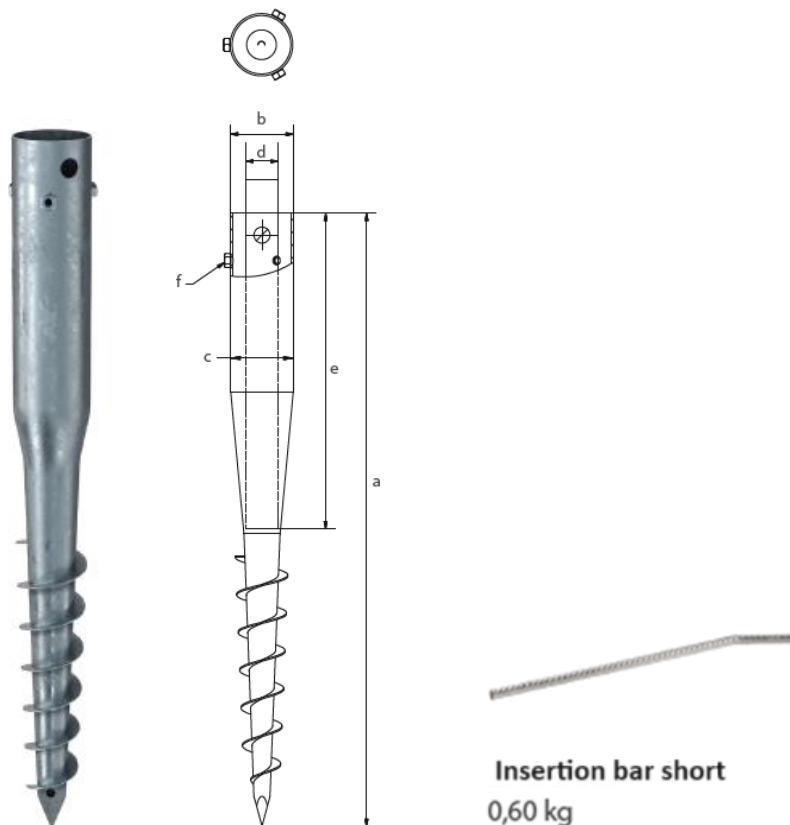


Ground socket

Insertion bar short
0,60 kg

- a Length 650mm
- b Outside diameter Socket 68mm
- c Inside diameter 64mm
- d Setting diameter 43mm
- e Adjusting depth until lower cone 315mm
- f Threads 3xM8

All information without guarantee, subject to change. The Data Sheet is not subject to any change service.
Each current and valid from can be recalled at www.kraiburg-relastec.com/euroflex

page 1 of 5

Installation Base Socket

Secure the ground socket by inserting the screw-in rod into the ground and fastening it straight.



Remove the floor in the area of the screws to facilitate later pipe installation, and evenly drive in the floor anchors.



Insert the metal tube into the floor sleeve until the lower cone stop, and secure it evenly in a straight position with the screws.

All information without guarantee, subject to change. The Data Sheet is not subject to any change service.
Each current and valid from can be recalled at www.kraiburg-relastec.com/euroflex

page 2 of 5



Fill the adjacent soil evenly and compact it.

Installation Steam

Using a glue gun, apply a one-component PUR adhesive (e.g., Ottocoll P83 and Ottocoll M500) to the recess designated for the pipe.

Dispense the adhesive into the recess in the handle.



Attach the stepper to the tube. Curing time prior to use: at least 24 hours.

All information without guarantee, subject to change. The Data Sheet is not subject to any change service.
Each current and valid from can be recalled at www.kraiburg-relastec.com/euroflex

page 3 of 5

The support surface of the steam must be level and stable.


If the installation of loose bulk material used as fall protection material (e.g., sand, wood chips, or similar) does not inherently guarantee stability, a concrete foundation with the dimensions 260 mm × 260 mm × 560 mm (depth) must be provided.

Installation may also be performed in a C12/15 concrete bed without using a ground sleeve.
Bonding of the mushroom cap: Apply a one-component polyurethane adhesive (e.g., Ottocoll P83) to the top surface of the cap.
Adhere the mushroom cap to the stem.





Curing time until use at least 24 hours

Dimension Steam

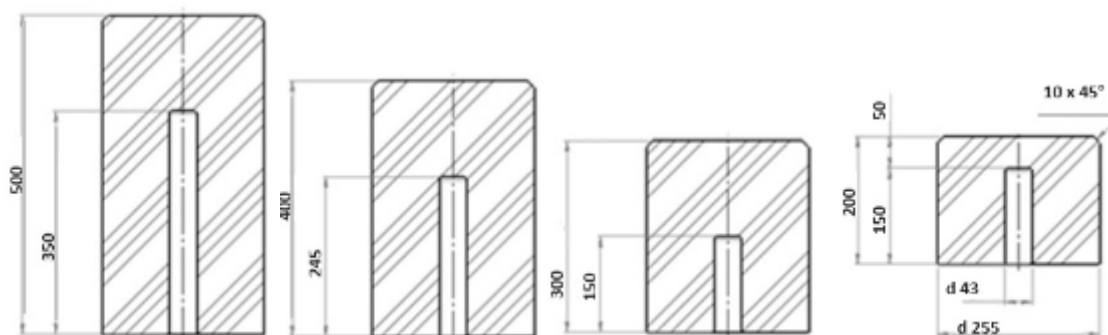

Dimension pipe

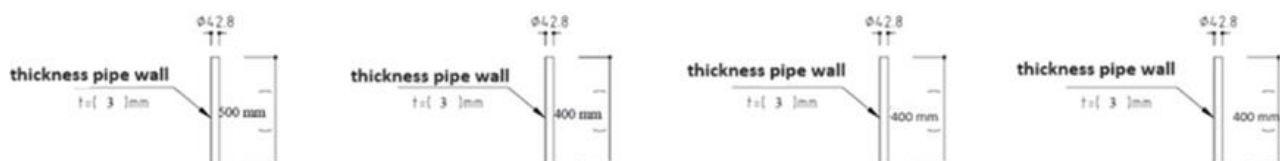

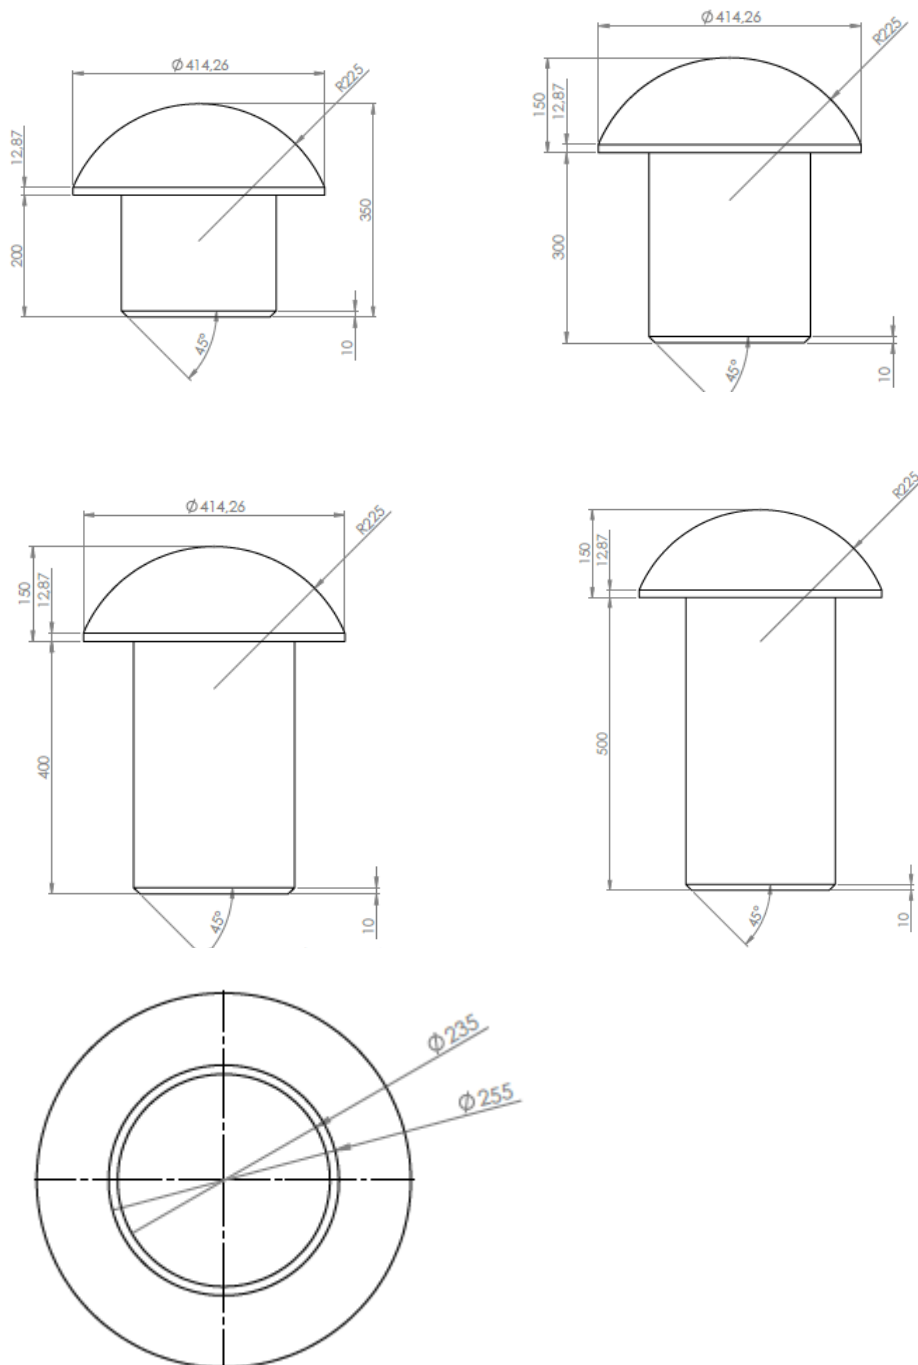

All information without guarantee, subject to change. The Data Sheet is not subject to any change service.
Each current and valid from can be recalled at www.kraiburg-relastec.com/euroflex

page 5 of 5